U-BOAT

CLASSICO

SOLOTEMPO



Dear Customer

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

IN THIS BOOKLET YOU WILL FIND THE USER INSTRUCTIONS.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE U-CLUB AREA, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS, SO TO GET ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.

Cechanical Automatic

A CROWN COVER

- CROWN
- C HOUR HAND
- MINUTE HAND SECONDS HAND
- G DAY

 
WATCH FUNCTIONS



Representative image. Some components may be in different positions or not fitted.

MECHANICAL AUTOMATIC . CLASSICO 17





- **NEUTRAL POSITION**
- POSITION 2 FIRST CLICK
- POSITION 3

Unscrew the crown cover to access the crown .

to set the desired time

POSITION 3

SECOND CLICK

to wind up and start the watch, turn the crown (3) clockwise. **POSITION 1** NEUTRAL POSITION

pull the crown 3 out to position 2. Turn the crown 3 clockwise to set the desired date 5. Rotate the crown 3 counterclockwise **POSITION 2** FIRST CLICK to set the desired day .

pull the crown (3) out further to position 3. Rotate the crown (3)

2. Press the crown 3 all the way down to return it to position 1. Carefully screw down the crown cover (a) until it locks completely.



- Your watch will keep its performance intact for a long time, with proper care.
- We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.
- We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.
 Do not leave the watch in places exposed to extreme temperature changes.
- humidity, the sun and strong magnetic fields.
- Make sure the watch is suitable for use in water.
- Always rinse the watch with fresh water after contact with salt water.

AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.

