 



EEN

WATCH FUNCTIONS.

- A** CROWN
- B** BEZEL CROWN
- C** BEZEL DOUBLE TIME
- D** HOUR HAND
- D1** DOUBLE TIME HAND
- E** MINUTE HAND
- F** SECOND HAND
- G** 24 HOUR INDICATOR
- H** DATE

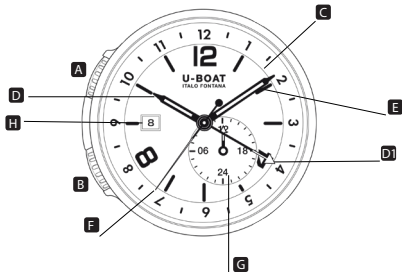

 REPRESENTATIVE IMAGE.
SOME COMPONENTS MAY BE IN DIFFERENT POSITIONS OR NOT FITTED.

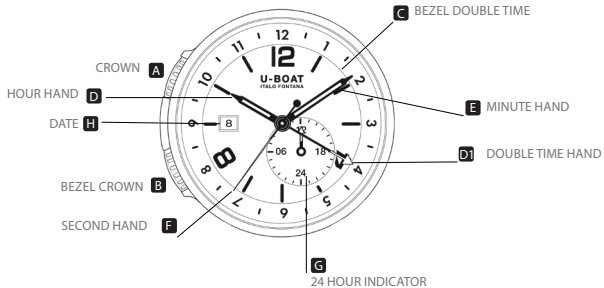


INSTRUCTIONS FOR USE.

POSITION 1 to wind and start the watch by turning the crown. **A**
NEUTRAL POSITION

POSIZIONE 2 carefully pull the crown **A** right out to the first click. Turn the
PRIMO SCATTO crown **A** clockwise to set the date **H** (if fitted).

POSIZIONE 3 carefully pull the crown **A** right out to the second click and turn
SECONDO SCATTO the crown **A** to set the exact time.
Use indicator **G** (if fitted) for correct date change **H** (if fitted).

 2. Fully depress the crown **A** to move it back into the neutral position.

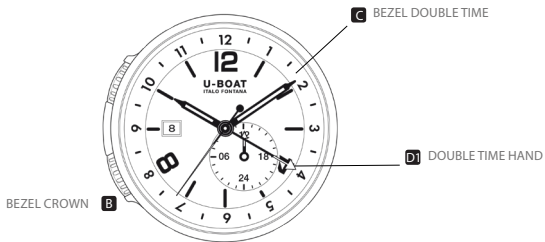

INSTRUCTIONS FOR DOUBLE TIME SETTING

Pull out the crown **B**.

Rotate the bezel **C** to set the second time. (check **D1**) double time hand).

Premere la corona **B** per tirornare alla posizione neutra.

Fully depress the crown **A** to move it back into the neutral position.