

U-BOAT
ITALO FONTANA

 
EN

**DEAR CUSTOMER,
WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.
IN THIS BOOKLET YOU WILL FIND THE INSTRUCTIONS FOR USE, THE
TECHNICAL DETAILS AND THE WARRANTY BOOKLET.
WE KINDLY INVITE YOU TO REGISTER YOUR WATCH
ON OUR OFFICIAL WEB SITE
IN THE U-CLUB AREA, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES
OWNERS AND GAIN ACCESS TO FURTHER BENEFITS AND PREVIEWS ON
OUR LATEST NEWS, EVENTS AND OFFERS.**



EN

WATCH FUNCTIONS.

- A** CAP CROWN
- B** **B1** CROWN EXTRACTION BUTTON
(if fitted)
- C** CROWN
- D** START/STOP CHRONOGRAPH
- E** RESET
- F** HOUR HAND
- G** MINUTE HAND
- H** SECOND HAND
- I** CHRONOGRAPH SECOND COUNTER
- L** CHRONOGRAPH MINUTE COUNTER
- M** CHRONOGRAPH HOUR COUNTER
- N** 24 HOUR INDICATOR
(IF FITTED)
- O** DATE
(IF FITTED)

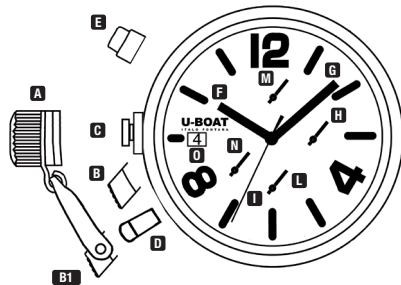

  REPRESENTATIVE IMAGE.
SOME COMPONENTS MAY BE IN DIFFERENT POSITIONS OR NOT FITTED.

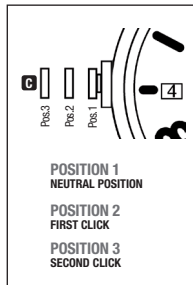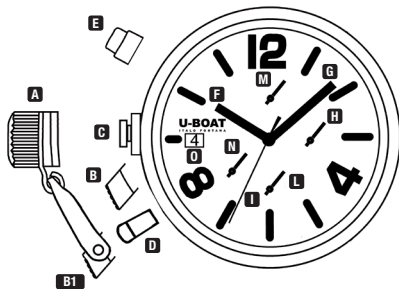

INSTRUCTIONS FOR USE.

1. Unscrew the cap crown **A** to gain access to the crown **C**.

POSITION 1 to wind and start the watch by turning the crown **C** clockwise.
NEUTRAL POSITION



POSITION 2 press button **B** | **B1** (if fitted) (**B1** incorporated in the cap crown holder **A**) to move the crown **C** into position 2 (first click). Turn the crown **C** clockwise to set the date **O** (if fitted).
FIRST CLICK

*For the models which do not have the crown release system, carefully pull the crown right out to the first click.
***CAREFULLY READ THE INSTRUCTIONS ON PAGE 93.**

POSITION 3 press button **B** | **B1** (if fitted) (**B1** incorporated in the cap crown holder **A**) again to move the crown **C** into position 3 (second click). Use indicator **N** for correct date change **O**.
SECOND CLICK

*For the models which do not have the crown release system, carefully pull the crown right out to the second click.

  
2. Fully depress the crown **C** to move it back into the neutral position.
Carefully screw in the cap crown **A** until firmly in place.

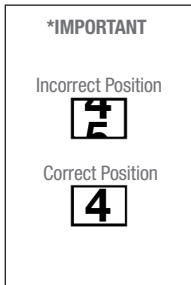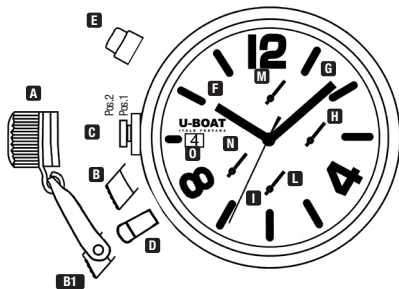

*** IMPORTANT**

To prevent misalignment or breakage of the date wheel when setting the date, make sure that:

 1. during manual adjustment of the date **O**, hour hand **F** is not pointing between 9pm and 3am (check the 24 hour hand **N**).
2. the day indicated by the date indicator **O** is aligned with the window (see illustration on page 64).
3. take the crown **C** out to the second click, move the hand **F** to 3 pm, depress the crown **C** to the first click and move the date indicator **O** to the desired date and check the alignment as indicated in point 2 above.

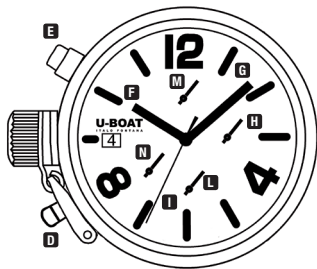

CHRONOGRAPH OPERATION INSTRUCTIONS

Press button **D** to start the chronograph and the hour/minute totalizer.

Press button **D** again to stop the chronograph and read the elapsed times.

Press button **E** to reset the counter.

EN

CARE AND MAINTENANCE.

The precision mechanism in your watch will provide long-lasting performance when properly cared for.

We recommend taking your watch to an Authorised Retailer / Authorised Service Centre every year for a check-up, perform ordinary maintenance on all mechanical parts and restore of water-resistance.

We also advise taking your watch to an Authorised Retailer / Authorised Service Centre to change the strap.

Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong magnetic fields.

Make sure the watch is in adequate conditions for water use/activities.

Remember to rinse the watch after it comes into contact with seawater.

Automatic watches require manual winding following a long period of inactivity.