

**U-BOAT**  
ITALO FONTANA

# CHIMERA

---

CHRONO



*Dear Customer*

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

 
IN THIS BOOKLET YOU WILL FIND THE USER INSTRUCTIONS.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE **U-CLUB AREA**, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS, SO TO GET ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.

# Mechanical Automatic Chrono



## WATCH FUNCTIONS

- A** CROWN COVER
- B** CHRONOGRAPH RESET PUSHER
- C** 24 HOURS INDICATOR
- D** CHRONOGRAPH HOUR COUNTER
- E** CHRONOGRAPH SECONDS COUNTER
- F** CROWN
- G** HOUR HAND
- H** MINUTE HAND
- I** CHRONOGRAPH MINUTE COUNTER
- L** CHRONOGRAPH START/STOP PUSHER
- M** SECONDS HAND
- N** CROWN EXTRACTION PUSHER
- O** DATE

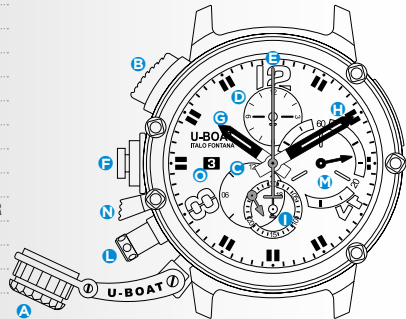

Representative image.

  Some components may be in different positions or not fitted.

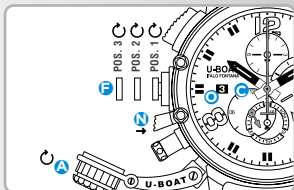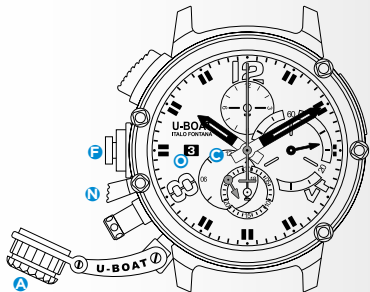

- **POSITION 1**  
NEUTRAL POSITION
- **POSITION 2**  
FIRST CLICK
- **POSITION 3**  
SECOND CLICK

1. Unscrew the crown cover **A** to access the crown **F**.  
**POSITION 1** to wind up and start the watch, turn the crown **F** clockwise.

NEUTRAL POSITION

 
**POSITION 2** press the pusher **N** to bring the crown **F** to position 2. Turn the crown **F** clockwise to set the desired date **C**.

FIRST CLICK

**POSITION 3** press the pusher **N** again to bring the crown **F** to position 3. Turn the crown **F** clockwise to set the desired time. Consider the indicator **C** (24 hours) for the correct click of the date **C**.

SECOND CLICK

2. Press the crown **F** all the way down to return it to position 1. Carefully screw down the crown cover **A** until it locks completely.

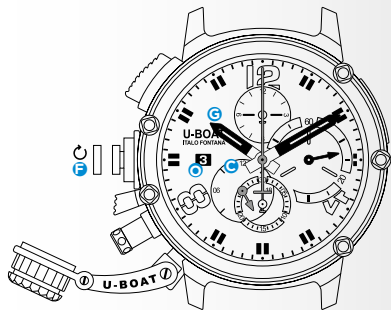

**\*CAUTION IMPORTANT**









INCORRECT POSITION



CORRECT POSITION



To avoid misalignment or breakage of the date click wheel when setting the date, make sure that:

1. When resetting the date  manually, the hand  is not positioned between 21 and 03 o'clock (refer to the 24 hours indicator  if necessary).
2. The day  indicated by the date window is aligned with the window (see figure alongside).
3. Bring the crown  to position 3, position the watch hand  at 3 o'clock, bring the crown  to position 2, move the date  to the desired day paying attention to point 2.



Press the (on/off) pusher **L** to start the chronograph hand and the hours/minutes totalizer.

Press the pusher **L** again to stop the chronograph, which will restart by pressing it again.

After measuring the times, with the chronograph stopped, press the pusher **B** to reset the chronograph and totalizer hands to zero.



## CARE AND MAINTENANCE

- Your watch will keep its performance intact for a long time, with proper care.
- We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.
- We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.
- Do not leave the watch in places exposed to extreme temperature changes, humidity, the sun and strong magnetic fields.
- Make sure the watch is suitable for use in water.
- Always rinse the watch with fresh water after contact with salt water.

**AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.**





## U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

[www.uboatwatch.com](http://www.uboatwatch.com) - [service@u-boatwatch.com](mailto:service@u-boatwatch.com)