

**U-BOAT**

**I T A L O F O N T A N A**

# CHIMERA

---

CHRONO



*Dear Customer*

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

 
IN THIS BOOKLET YOU WILL FIND THE INSTRUCTIONS FOR USE.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE **U-CLUB AREA**, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS AND GAIN ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.

# Mechanical Automatic Chrono



## WATCH INSTRUCTIONS

- A** CAP CROWN
- B** RESET THE CHRONO
- C** 24 H COUNTER (PM-AM)
- D** CHRONOGRAPH HOUR COUNTER
- E** CHRONOGRAPH SECONDS HAND
- F** CROWN
- G** HOUR HAND
- H** MINUTE HAND
- I** CHRONOGRAPH MINUTE COUNTER
- L** START/STOP CHRONOGRAPH
- M** SECONDS COUNTER
- N** CROWN EXTRACTION BUTTON
- O** DATE

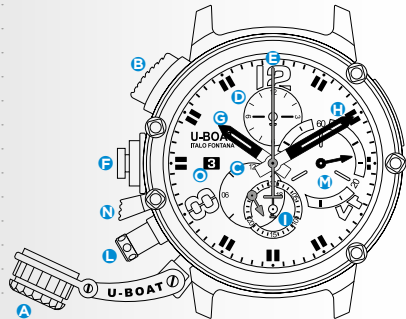

Representative image.

  Some components may be in different positions or not fitted.

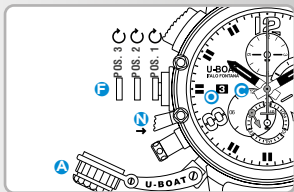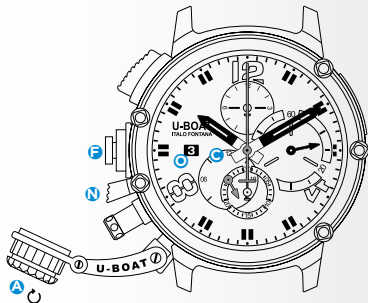

- **POSITION 1**  
NEUTRAL POSITION
- **POSITION 2**  
FIRST CLICK
- **POSITION 3**  
SECOND CLICK


1. Unscrew the cap crown **A** to gain access to the crown **F**.  
**POSITION 1** to wind and start the watch by turning the crown **F** clockwise.

NEUTRAL POSITION

**POSITION 2** press button **N** to move the crown **F** into position 2 (first click).  
 FIRST CLICK Turn the crown **F** clockwise to set the date **C**.

**POSITION 3** press button **N** again to move the crown **F** into position 3 (second click) and turn the crown **F** to set the exact time. Use indicator **C**  
 SECOND CLICK for correct date change **C**.

2. Fully depress the crown **F** to move it back into the neutral position. Carefully screw in the cap crown **A** until firmly in place.

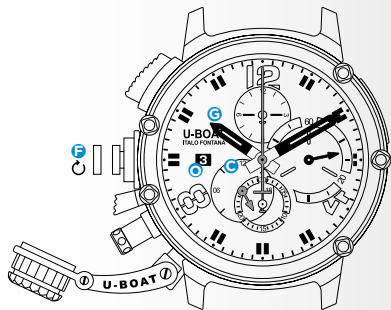

**\*IMPORTANT**  
INCORRECT POSITION



CORRECT POSITION



To prevent misalignment or breakage of the date wheel when setting the date, make sure that:

1. During manual adjustment of the date **G**, hour hand **C** is not pointing between 9 pm and 3 am (check the 24 hour hand **C**).
2. The day indicated by the date indicator **G** is aligned with the window (see the picture next)
3. Take the crown **F** out to the second click, move the hand **G** to 3 pm, depress the crown **F** to the first click and move the date indicator **G** to the desired date and check the alignment as indicated in point 2 above.



## CHRONOGRAPH OPERATION INSTRUCTIONS

Press button **L** (start/stop) to start the chronograph and the hour/minute counters.

Press button **L** again to stop the chronograph and once more to restart it.

After noting the time measured, press reset button **B** when the chronograph is stopped to return the chronograph hand and counters to zero.



## CARE AND MAINTENANCE

- The precision mechanism in your watch will provide long-lasting performance when properly cared for.
- We recommend taking your watch to an Authorised Retailer/Authorised Service Centre every 3-4 years for a check-up and to perform ordinary maintenance on all mechanical parts and restore of water-resistance.
- We also advise taking your watch to an Authorised Retailer/Authorised Service Centre to change the strap.
- Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong magnetic fields.
- Make sure the watch is in adequate conditions for water use/activities.
- Remember to rinse the watch after it comes into contact with seawater.

**AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.**





## U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

[www.uboatwatch.com](http://www.uboatwatch.com) - [service@u-boatwatch.com](mailto:service@u-boatwatch.com)