

U-BOAT
ITALO FONTANA

DUAL TIME

DOPPIOTEMPO CHRONO



Gentile Cliente

CI CONGRATULIAMO CON LEI PER L'ACQUISTO DI QUESTO ESEMPLARE U-BOAT.


IN QUESTO MANUALE TROVERÀ LE ISTRUZIONI DEL SUO OROLOGIO.

LA RINGRAZIAMO PER LA FIDUCIA E LA INVITIAMO A REGISTRARSI SUL NOSTRO SITO UFFICIALE NELLA SEZIONE **U-CLUB** DEDICATA ESCLUSIVAMENTE AI PROPRIETARI/POSSESSORI DI PRODOTTI U-BOAT, IN MODO DA POTER RICEVERE ULTERIORI VANTAGGI, ED ESSERE INFORMATO RIGUARDO OFFERTE, EVENTI E NEWS IN ANTEPRIMA.



Mechanical Automatic Chrono Dual time

WATCH FUNCTIONS

- A** CAP CROWN
- B** CROWN EXTRACTION BUTTON
- C** CROWN
- D** START/STOP CHRONOGRAPH
- E** CHRONO ALIGNMENT BUTTON
- F** HOUR HAND
- F1** DUAL TIME HAND
- G** MINUTE HAND
- H** SECOND HAND
- I** CHRONOGRAPH SECONDS COUNTER
- L** CHRONOGRAPH MINUTE COUNTER
- M** CHRONOGRAPH HOUR COUNTER
- N** 24 HOUR INDICATOR
- O** DATE
- P** BIDIRECTIONAL DUAL TIME BEZEL
- Q** BEZEL LOCK LEVER

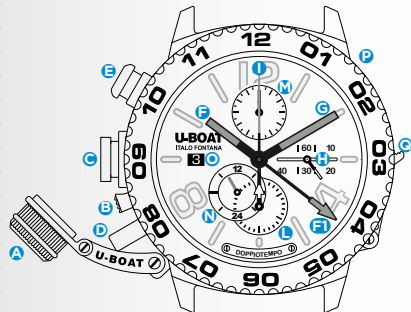

Representative image.
Some components may be in different positions or not fitted.

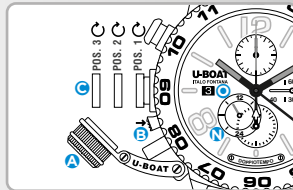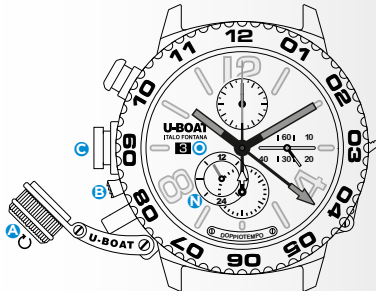

- **POSITION 1**
NEUTRAL POSITION
- **POSITION 2**
FIRST CLICK
- **POSITION 3**
SECOND CLICK

1. Unscrew the cap crown **A** to gain access to the crown **C**.

POSITION 1
NEUTRAL POSITION

unscrew the crown **C** to wind and start the watch.


POSITION 2
FIRST CLICK

press the button **B**, the crown **C** is positioned at the first click. Rotate the crown **C** clockwise to set the exact time **O**.

POSITION 3
SECOND CLICK

press the button further **B**, the crown **C** moves to the second click, rotate the crown **C** to set the exact time. Use indicator **N** for correct date change **O**.

2. Press the crown **C** fully to return it to the neutral position. Carefully screw in the cap crown **A** until it is completely locked.

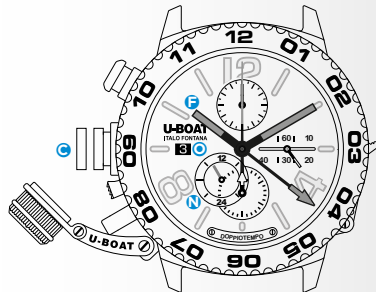

***IMPORTANT**
INCORRECT POSITION



CORRECT POSITION



To prevent misalignment or breakage of the date wheel when setting the date, make sure that:

1. During manual adjustment of the date **C**, hour hand **F** is not pointing between 9 pm and 3 am (check the 24 hour hand **N**).
2. The day indicated by the date indicator **C** is aligned with the window (see the picture next)
3. Take the crown **C** out to the second click, move the hand **F** to 3 pm, depress the crown **C** to the first click and move the date indicator **C** to the desired date and check the alignment as indicated in point 2 above.




CHRONOGRAPH OPERATION INSTRUCTIONS

Press button **D** (start/stop) to start the chronograph and the hour/minute counters.

Press button **D** again to stop the chronograph and once more to restart it.

After noting the time measured, press reset button **E** when the chronograph is stopped to return the chronograph hand and counters to zero.

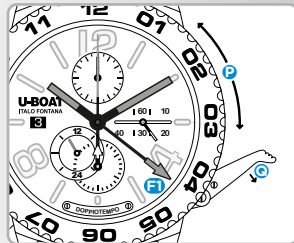

Unlock the lever **C**.

Set the desired time by turning the bezel **P** in correspondence with the hand **F1**.

Lock the lever **C**.



CARE AND MAINTENANCE

- The precision mechanism in your watch will provide long-lasting performance when properly cared for.
- We recommend taking your watch to an Authorised Retailer/Authorised Service Centre every 3-4 years for a check-up and to perform ordinary maintenance on all mechanical parts.
- We also advise taking your watch to an Authorised Retailer/Authorised Service Centre to change the strap.
- Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong magnetic fields.
- Remember to rinse the watch after it comes into contact with seawater.

AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.



U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

www.uboatwatch.com - service@u-boatwatch.com