 


U-BOAT
ITALO FONTANA

 
EN

WATCH FUNCTIONS.

- A** CAP CROWN
- B** CROWN EXTRACTION BUTTON
(if fitted)
- C** CROWN
- D** HOUR HAND
- E** MINUTE HAND
- F** SECOND HAND
(if fitted)
- G** 24 HOUR INDICATOR
(if fitted)
- H** DATE
(if fitted)

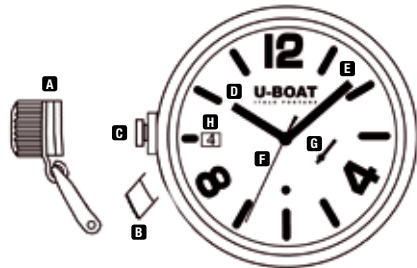

REPRESENTATIVE IMAGE.
SOME COMPONENTS MAY BE IN DIFFERENT POSITIONS OR NOT FITTED.

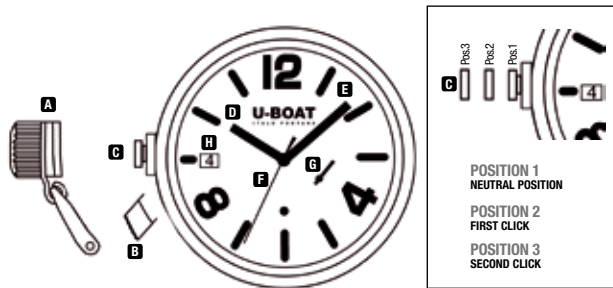

INSTRUCTIONS FOR USE.

1. Unscrew the cap crown **A** to gain access to the crown **C**.

POSITION 1 to wind and start the watch by turning the crown **C**.
NEUTRAL POSITION

POSITION 2 press button **B** to move the crown **C** into position 2 (first click). Turn the crown **C** clockwise to set the date **H** (if fitted).
FIRST CLICK

*For the models which do not have the crown release system, carefully pull the crown right out to the first click.

POSITION 3 press button **B** again to move the crown **C** into position 3 (second click) and turn the crown **C** to set the exact time. Use indicator **G** (if fitted) for correct date change **H** (if fitted).
SECOND CLICK

 
*For the models which do not have the crown release system, carefully pull the crown right out to the second click.

2. Fully depress the crown **C** to move it back into the neutral position. Carefully screw in the cap crown **A** until firmly in place.



EN

WATCH FUNCTIONS.

- A** CAP CROWN
- B** **B1** CROWN EXTRACTION BUTTON
(if fitted)
- C** CROWN
- D** START/STOP CHRONOGRAPH
- E** RESET
- F** HOUR HAND
- G** MINUTE HAND
- H** SECOND HAND
- I** CHRONOGRAPH SECOND COUNTER
- L** CHRONOGRAPH MINUTE COUNTER
- M** CHRONOGRAPH HOUR COUNTER
- N** 24 HOUR INDICATOR
(if fitted)
- O** DATE
(if fitted)

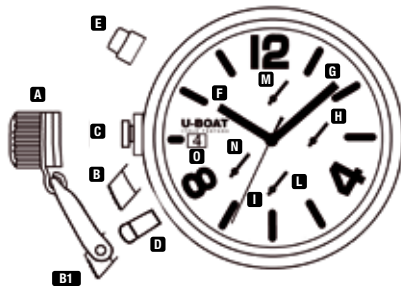

  REPRESENTATIVE IMAGE.
SOME COMPONENTS MAY BE IN DIFFERENT POSITIONS OR NOT FITTED.

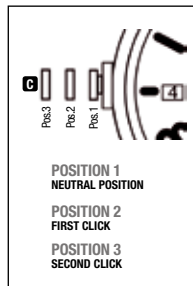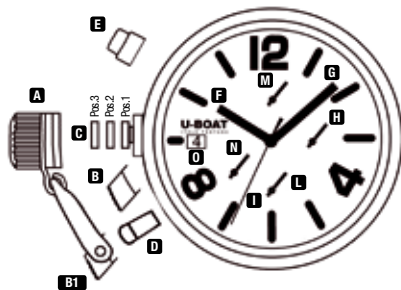

INSTRUCTIONS FOR USE.

1. Unscrew the cap crown **A** to gain access to the crown **C**.

POSITION 1 to wind and start the watch by turning the crown **C**.
NEUTRAL POSITION

POSITION 2 press button **B** | **B1** (if fitted) (**B1** incorporated in the cap crown holder **A**) to move the crown **C** into position 2 (first click). Turn the crown **C** clockwise to set the date **O** (if fitted).*



*For the models which do not have the crown release system, carefully pull the crown right out to the first click.

***CAREFULLY READ THE INSTRUCTIONS ON PAGE 33.**

POSITION 3 press button **B** | **B1** (if fitted) (**B1** incorporated in the cap crown holder **A**) again to move the crown **C** into position 3 (second click). Use indicator **N** for correct date change **O**.

*For the models which do not have the crown release system, carefully pull the crown right out to the second click.


2. Fully depress the crown **C** to move it back into the neutral position.
Carefully screw in the cap crown **A** until firmly in place.

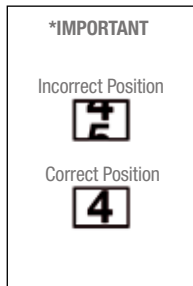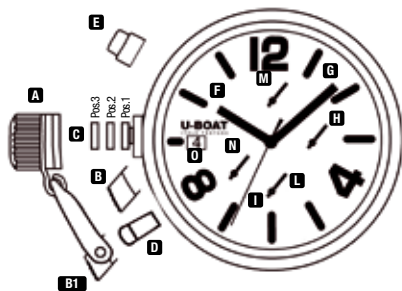

* IMPORTANT

To prevent misalignment or breakage of the date wheel when setting the date, make sure that:

1. during manual adjustment of the date **O**, hour hand **F** is not pointing between 9pm and 3am (check the 24 hour hand **N**).
2. the day indicated by the date indicator **O** is aligned with the window (see illustration on page 32).
3. take the crown **C** out to the second click, move the hand **F** to 3 pm, depress the crown **C** to the first click and move the date indicator **O** to the desired date and check the alignment as indicated in point 2 above.

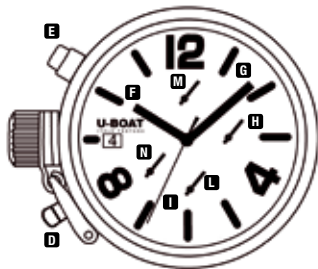

INSTRUCTION FOR USE

Press button **D** to start the chronograph and the hour/minute totalizer.

Press button **D** again to stop the chronograph and read the elapsed times.

Press button **E** to reset the counter.

EN

CARE AND MAINTENANCE.

The precision mechanism in your watch will provide long-lasting performance when properly cared for.

We recommend taking your watch to an Authorised Retailer / Authorised Service Centre every 3-4 years for a check-up and to perform ordinary maintenance on all mechanical parts.

We also advise taking your watch to an Authorised Retailer / Authorised Service Centre to change the strap.

Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong magnetic fields.

Remember to rinse the watch after it comes into contact with seawater.

Automatic watches require manual winding following a long period of inactivity.

U-BOAT HEAD OFFICE

Via per San Gennaro, 13

Gragnano, Capannori - 55012 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

service@u-boatwatch.com