

U-BOAT
ITALO FONTANA

CAPSOIL
CHRONO



Dear Customer

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

IN THIS BOOKLET YOU WILL FIND THE USER INSTRUCTIONS.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE **U-CLUB AREA**, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS, SO TO GET ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.


Quartz

- A** CHRONOGRAPH START/STOP PUSHER
- B** CHRONOGRAPH RESET PUSHER
- C** SCREW CROWN
- D** HOUR HAND
- E** MINUTE HAND
- F** CHRONOGRAPH SECONDS HAND
- G** SECONDS COUNTER
- H** CHRONOGRAPH MINUTE COUNTER
- I** CHRONOGRAPH HOUR COUNTER



WATCH FUNCTIONS

Representative image.
Some components may be in different positions or not fitted.

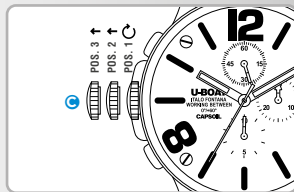

- **POSITION 1**
NEUTRAL POSITION
- **POSITION 3**
SECOND CLICK

POSITION 1
NEUTRAL POSITION

operating position of the watch.

POSITION 3
SECOND CLICK

unscrew the crown  and pull it out to take it to position 3. Rotate the crown  to set the desired time.

1. Push in and screw the crown  back to position 1.

Note: it is recommended to unscrew the crown  to position 3 when the watch will not be used for a long time, to limit battery consumption.



Press the (on/off) pusher **A** to start the chronograph hand and the hours/minutes totalizer.

Press the pusher **A** again to stop the chronograph, which will restart by pressing it again.

After measuring the times, with the chronograph stopped, press the pusher **B** to reset the chronograph and totalizer hands to zero.




1. Press the pusher **A** to start the chronograph.
2. Press the pusher **B** to stop the chronograph allowing an intermediate time to be read while timing continues. By pressing the pusher **B** again, the chronograph hands to “recover” the elapsed time.
3. 1* Start
2* Time reading
3* Restart
4* Time reading
5* Restart
6* Stop



ADJUSTING CHRONOGRAPH HANDS TO CORRECT POSITION

1. Unscrew the crown **C** and pull it out to position 3.
2. Press the pushers **A** and **B** simultaneously for about 2 seconds.
The counter hand **F** will rotate 360°.
By pressing the pusher **A**, the counter hand **F** will return to the correct position.
Press the pusher **B** to activate counter hand **I** correction.
Press the pusher **A** to reposition the counter hand **I** in the correct position.
By pressing the pusher **B** again we activate the correction of the counter hand **H**.
Press the pusher **A** to reposition the counter hand **H** in the correct position.
3. Screw the crown **C** back in to position 1.

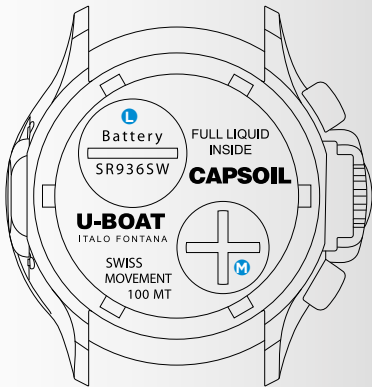

BATTERY REPLACEMENT AND OIL ADJUSTMENT

1. Innovative closure system with a compartment for quick battery change **L**.
2. Closing system and internal oil regulation, for the exclusive use of U-BOAT specialized technicians **M**.

Note: the oily fluid inside the case may be subject to slight changes in shade due to the natural change of the liquid.



CARE AND MAINTENANCE

- Your watch will keep its performance intact for a long time, with proper care.
- We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.
- We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.
- Do not leave the watch in places exposed to extreme temperature changes, humidity, the sun and strong magnetic fields.
- Make sure the watch is suitable for use in water.
- Always rinse the watch with fresh water after contact with salt water.
- It is advisable to unscrew the crown when the watch will not be used for a long time, to limit battery consumption. We recommend that you contact an authorized center to replace the battery.

OPTIMAL OPERATING CONDITIONS: 0°/+60°C.



U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

www.uboatwatch.com - service@u-boatwatch.com