U-BOAT

CLASSICO

SOLOTEMPO



Dear Customer

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

IN THIS BOOKLET YOU WILL FIND THE USER INSTRUCTIONS.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE U-CLUB AREA, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS, SO TO GET ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.

Mechanical Automatic



- B HOUR HAND
- C MINUTE HAND
- SECONDS HAND
- DATE
- **D**A

WATCH FUNCTIONS



Representative image. Some components may be in different positions or not fitted.

MECHANICAL AUTOMATIC • CLASSICO | 7





- POSITION 1 NEUTRAL POSITION
- POSITION 2 FIRST CLICK
- POSITION 3 SECOND CLICK

POSITION 1 IEUTRAL POSITION	to wind up and start the watch, turn the crown 🛕 clockwise.
POSITION 2 IRST CLICK	pull the crown 🐧 out to position 2. Turn the crown 🐧 clockwise to set the desired date 😉. Rotate the crown 🐧 counterclockwise to set the desired day 🙃
POSITION 3	pull the crown out further to position 3. Rotate the crown of the set the desired time



- Your watch will keep its performance intact for a long time, with proper care.
- We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.
- We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.
- Do not leave the watch in places exposed to extreme temperature changes, humidity, the sun and strong magnetic fields.
- Make sure the watch is suitable for use in water.
- Always rinse the watch with fresh water after contact with salt water.

AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.

