

U-BOAT
ITALO FONTANA

EMN

CARE AND MAINTENANCE.

Your watch will keep its performance intact for a long time, with proper care.

We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.

We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.

Do not leave the watch in places exposed to extreme temperature changes, humidity, the sun and strong magnetic fields.


Make sure the watch is suitable for use in water.

Always rinse the watch with fresh water after contact with salt water.

^A
AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.

WATCH FUNCTIONS.

- A** WINDING CROWN COVER
- B** RESET PUSHER
- C** DATE INDICATOR
- D** CHRONOGRAPH HOUR COUNTER
- E** CHRONOGRAPH SECONDS HAND
- F** WINDING CROWN
- G** CHRONOGRAPH MINUTE COUNTER
- H** START/STOP CHRONOGRAPH
- I** SECONDS COUNTER
- L** WINDING CROWN EXTRACTION PUSHER

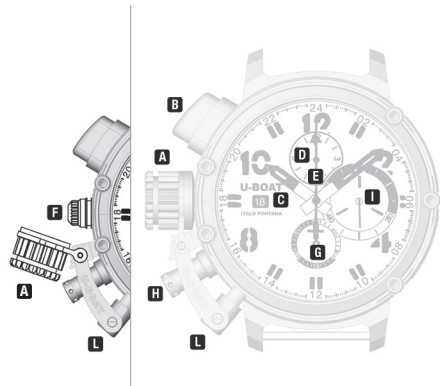


POSITION 1
NEUTRAL POSITION



POSITION 2
FIRST CLICK



POSITION 3
SECOND CLICK

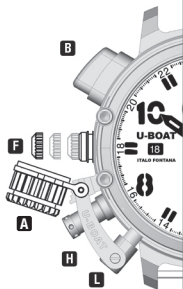

INSTRUCTIONS FOR USE.

1. Unscrew the winder cover **A**, and press button **L** to extract the winder **F** to the desired position.

POSITION 1
NEUTRAL POSITION Watch operation position.
Watch winding position.

POSITION 2
FIRST CLICK Rapid date setting by turning in a clockwise direction.*

POSITION 3
SECOND CLICK Precise time setting position. We advise going past the desired minute and then turning the hand back to the precise position.

2. Close the winder **F** and return the winder cover **A** to its original position; turn until it stops.

* NB: when performing this operation, make sure the watch hands are not pointing to between 9 o'clock and 3 o'clock.

U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

www.uboatwatch.com - service@u-boatwatch.com