U-BOAT

ITALO FONTANA



DEAR CUSTOMER,

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

IN THIS BOOKLET YOU WILL FIND THE INSTRUCTIONS FOR USE, THE TECHNICAL DETAILS AND THE WARRANTY BOOKLET.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH
ON OUR OFFICIAL WEB SITE

IN THE U-CLUB AREA, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS AND GAIN ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.




WATCH FUNCTIONS.

- A CROWN
- B BEZEL CROWN
- C BEZEL DOUBLE TIME
- D HOUR HAND
- D1 DOUBLE TIME HAND
- E MINUTE HAND
- F SECOND HAND
- G 24 HOUR INDICATOR

 H DATE



REPRESENTATIVE IMAGE. SOME COMPONENTS MAY BE IN DIFFERENT POSITIONS OR NOT FITTED

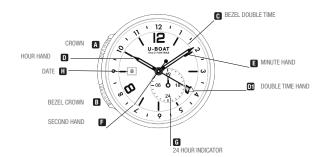

INSTRUCTIONS FOR USE.

POSITION 1 NEUTRAL POSITION	to wind and start the watch by turning the crown \blacksquare clockwise.
POSITION 2 FIRST CLICK	carefully pull the crown \blacksquare right out to the first click. Turn the crown clockwise to set the date \blacksquare (if fitted).
POSITION 3 Second Click	carefully pull the crown A right out to the second click and turn the crown A to set the exact time. Use indicator G (if fitted) for correct date change H (if fitted).

Fully depress the crown at to move it back into the neutral position.



INSTRUCTIONS FOR DOUBLE TIME SETTING

Pull out the crown **B**.

Rotate the bezel **©** to set the second time. (check **©**) double time hand).

Fully depress the crown **B** to move it back into the neutral position.



CARE AND MAINTENANCE.

The precision mechanism in your watch will provide long-lasting performance when properly cared for.

We recommend taking your watch to an Authorised Retailer / Authorised Service Centre every year for a

check-up, perform ordinary maintenance on all mechanical parts and restore of water-resistance.

We also advise taking your watch to an Authorised Retailer / Authorised Service Centre to change the strap.

Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong

magnetic fields.

Make sure the watch is in adequate conditions for water use/activities.

Remember to rinse the watch after it comes into contact with seawater.

Automatic watches require manual winding following a long period of inactivity.