

U-BOAT
I T A L O F O N T A N A

EN

CARE AND MAINTENANCE.

The precision mechanism in your watch will provide long-lasting performance when properly cared for.

We recommend taking your watch to an Authorised Retailer / Authorised Service Centre every 3-4 years for a check-up and to perform ordinary maintenance on all mechanical parts.

We also advise taking your watch to an Authorised Retailer / Authorised Service Centre to change the strap.

Avoid leaving your watch where it is exposed to large temperature variations, humidity, the sun and strong magnetic fields.

WATCH FUNCTIONS

- A** WINDER COVER
- B** MINUTE HAND
- C** HOUR HAND
- D** DATE INDICATOR
- F** WINDER
- G** GMT HAND
- H** SECOND HAND
- L** WINDER EXTRACTION BUTTON



POSITION 1
NEUTRAL POSITION



POSIZIONE 2
FIRST CLICK



POSIZIONE 3
SECOND CLICK



INSTRUCTIONS FOR USE.

1. Unscrew the winder cover **A** to access the winder **F**.

POSITION 1
NEUTRAL POSITION

Watch operation position.

Watch winding position.

POSITION 2
FIRST CLICK

Press the button **L** to put winder **F** in the first position for rapid date setting by turning in a clockwise direction.*

Rapid GMT time setting by turning in an anti-clockwise direction.

POSITION 3
SECOND CLICK

Press the button **L** for precise time setting. We advise you to turn the minute hand past the desired time and then back to the exact position.

2. Close the winder **F** and turn the winder cover **A** to its original position (turn until it stops).

* NB: It is not possible to adjust the date between 9.00 p.m. and 3.00 a.m.