

U-BOAT
ITALO FONTANA

CLASSICO

CHRONO



Dear Customer

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

IN THIS BOOKLET YOU WILL FIND THE USER INSTRUCTIONS.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE **U-CLUB AREA**, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS, SO TO GET ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.



Mechanical Automatic Chrono

WATCH FUNCTIONS

- A** CROWN COVER
- B** CROWN EXTRACTION PUSHER
- C** CROWN
- D** CHRONOGRAPH START/STOP PUSHER
- E** CHRONOGRAPH RESET PUSHER
- F** HOUR HAND
- G** MINUTE HAND
- H** SECONDS COUNTER
- I** CHRONOGRAPH SECONDS HAND
- L** CHRONOGRAPH MINUTE COUNTER
- M** CHRONOGRAPH HOUR COUNTER
- N** 24 HOURS INDICATOR
- O** DATE



Representative image.
Some components may be in different positions or not fitted.

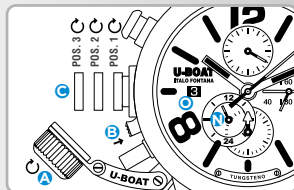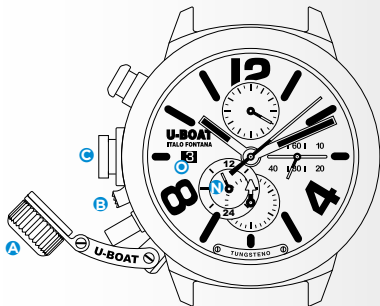

- **POSITION 1**
NEUTRAL POSITION
- **POSITION 2**
FIRST CLICK
- **POSITION 3**
SECOND CLICK

1. Unscrew the crown cover **A** to access the crown **C**.

POSITION 1 NEUTRAL POSITION

to wind up and start the watch, turn the crown **C** clockwise.

POSITION 2 FIRST CLICK

press the pusher **B** to bring the crown **C** to position 2. Turn the crown **C** clockwise to set the desired date **⊙**.

POSITION 3 SECOND CLICK

press the pusher **B** again to bring the crown **C** to position 3. Turn the crown **C** clockwise to set the desired time. Consider the indicator **N** (24 hours) for the correct click of the date **⊙**.

2. Press the crown **C** all the way down to return it to position 1. Carefully screw down the crown cover **A** until it locks completely.



***CAUTION IMPORTANT**

INCORRECT POSITION



CORRECT POSITION



To avoid misalignment or breakage of the date click wheel when setting the date, make sure that:

1. When resetting the date manually, the hand is not positioned between 21 and 03 o'clock (refer to the 24 hours indicator if necessary).
2. The day indicated by the date window is aligned with the window (see figure alongside).
3. Bring the crown to position 3, position the watch hand at 3 o'clock, bring the crown to position 2, move the date to the desired day paying attention to point 2.



CHRONOGRAPH FUNCTIONS

Press the (on/off) pusher **D** to start the chronograph hand and the hours/minutes totalizer.

Press the pusher **D** again to stop the chronograph, which will restart by pressing it again.

After measuring the times, with the chronograph stopped, press the pusher **E** to reset the chronograph and totalizer hands to zero.



CARE AND MAINTENANCE

- Your watch will keep its performance intact for a long time, with proper care.
- We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.
- We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.
- Do not leave the watch in places exposed to extreme temperature changes, humidity, the sun and strong magnetic fields.
- Make sure the watch is suitable for use in water.
- Always rinse the watch with fresh water after contact with salt water.

AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.



U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

www.uboatwatch.com - service@u-boatwatch.com