

U-BOAT
ITALO FONTANA

CLASSICO

CHRONO



Dear Customer

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT WATCH.

IN THIS BOOKLET YOU WILL FIND THE USER INSTRUCTIONS.

WE KINDLY INVITE YOU TO REGISTER YOUR WATCH ON OUR OFFICIAL WEB SITE IN THE **U-CLUB AREA**, DEDICATED EXCLUSIVELY TO THE U-BOAT WATCHES OWNERS, SO TO GET ACCESS TO FURTHER BENEFITS AND PREVIEWS ON OUR LATEST NEWS, EVENTS AND OFFERS.

 
 
Mechanical Automatic Chrono

WATCH FUNCTIONS

- A** CROWN COVER
- B** CROWN EXTRACTION PUSHER
- C** CROWN
- D** CHRONOGRAPH START/STOP PUSHER
- E** CHRONOGRAPH RESET PUSHER
- F** HOUR HAND
- G** MINUTE HAND
- H** SECONDS COUNTER
- I** CHRONOGRAPH SECONDS HAND
- L** CHRONOGRAPH MINUTE COUNTER
- M** CHRONOGRAPH HOUR COUNTER
- N** 24 HOURS INDICATOR
- O** DATE



Representative image.
Some components may be in different positions or not fitted.

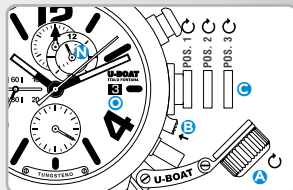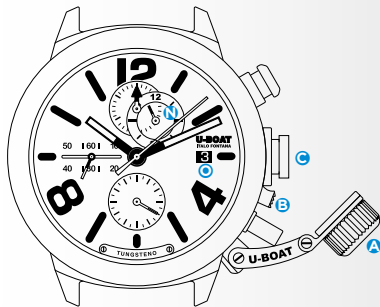

- **POSITION 1**
NEUTRAL POSITION
- **POSITION 2**
FIRST CLICK
- **POSITION 3**
SECOND CLICK

1. Unscrew the crown cover **A** to access the crown **C**.

POSITION 1
NEUTRAL POSITION

to wind up and start the watch, turn the crown **C** clockwise.


POSITION 2
FIRST CLICK

press the pusher **B** to bring the crown **C** to position 2. Turn the crown **C** clockwise to set the desired date **N**.

POSITION 3
SECOND CLICK

press the pusher **B** again to bring the crown **C** to position 3. Turn the crown **C** clockwise to set the desired time. Consider the indicator **N** (24 hours) for the correct click of the date **N**.

 2. Press the crown **C** all the way down to return it to position 1. Carefully screw down the crown cover **A** until it locks completely.

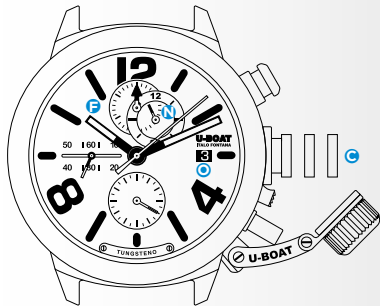

***CAUTION IMPORTANT**

INCORRECT POSITION

 


CORRECT POSITION



To avoid misalignment or breakage of the date click wheel when setting the date, make sure that:

1. When resetting the date Ⓞ manually, the hand ⓕ is not positioned between 21 and 03 o'clock (refer to the 24 hours indicator Ⓝ if necessary).
2. The day Ⓞ indicated by the date window is aligned with the window (see figure alongside).
3. Bring the crown Ⓢ to position 3, position the watch hand ⓕ at 3 o'clock, bring the crown Ⓢ to position 2, move the date Ⓞ to the desired day paying attention to point 2.

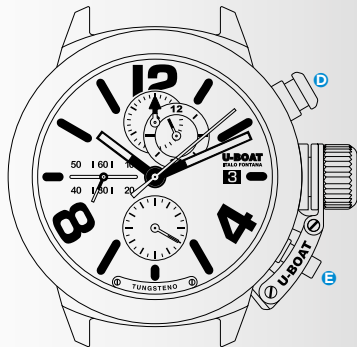

CHRONOGRAPH FUNCTIONS

Press the (on/off) pusher **D** to start the chronograph hand and the hours/minutes totalizer.

Press the pusher **D** again to stop the chronograph, which will restart by pressing it again.

After measuring the times, with the chronograph stopped, press the pusher **E** to reset the chronograph and totalizer hands to zero.



- Your watch will keep its performance intact for a long time, with proper care.
- We recommend that you have your watch checked every 3-4 years at one of our Authorized Dealers/Authorised Service Centres, to carry out ordinary maintenance on all mechanical parts and water resistance.
- We also recommend contacting an Authorized Dealer/Authorised Service Center to replace the strap.
- Do not leave the watch in places exposed to extreme temperature changes, humidity, the sun and strong magnetic fields.
- Make sure the watch is suitable for use in water.
- Always rinse the watch with fresh water after contact with salt water.

AUTOMATIC WATCHES REQUIRE MANUAL WINDING FOLLOWING A LONG PERIOD OF INACTIVITY.



U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

www.uboatwatch.com - service@u-boatwatch.com