U-BOAT



Dear Customer

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT MODEL.

IN THIS MANUAL YOU WILL FIND THE INSTRUCTIONS FOR YOUR WATCH.

WE THANK YOU FOR YOUR TRUST AND INVITE YOU TO REGISTER ON OUR OFFICIAL WEBSITE IN THE U-CLUB SECTION DEDICATED EXCLUSIVELY TO OWNERS/POSSITORS OF U-BOAT PRODUCTS, IN ORDER TO RECEIVE ADDITIONAL ADVANTAGES, AND BE INFORMED ABOUT OFFERS, EVENTS AND NEWS IN PREVIEW.



- SCREW-DOWN CROWN
- B HOURS PIECE
- MINUTES PIECE

 D SECONDS PIECE
- UNIDIRECTIONAL BEZEL
- AUTOMATIC HELIUM VALVE

WATCH FUNCTIONS




Indicative image

Some components may be missing or arranged in a different position.

INSTRUCTION FOR USE



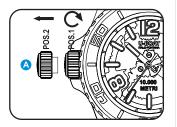

- . POSITION 1
 NEUTRAL POSITION
- . POSITION 2
 FIRST CLICK

POSITION 1 Watch operating position, to wind and start the watch unscrew crown A and turn it clockwise.

Pull out crown A to bring it to position 2.

Rotate crown A to set the desired time.

Press and screw crown A back into position 1.

Bezel (E) rotates clockwise.

AUTOMATIC PROFONDO I 7

AUTOMATIC PROFONDO I 8



The helium valve [] has the function of automatically compensating the internal pressure of the watch.



CARE AND MAINTENANCE

- Your watch will maintain its performance intact for a long time, with the appropriate care.
- We recommend that you have your watch checked every 3-4 years by one of our Authorized Retailers/Authorized Service Centers, to carry out normal maintenance of all mechanical parts and water resistance.
- We also recommend that you contact an Authorized Retailer/Authorized Service Center to replace the strap.
- Avoid leaving your watch in places exposed to strong temperature variations, humidity, sunlight and intense magnetic fields.
 - Make sure that your watch is suitable for use in water.
 - Always rinse your watch with fresh water after contact with salt water.
 - Automatic watches require manual winding after a long period of inactivity.

PASSION AND ENERGY



