

U-BOAT
ITALO FONTANA

CLASSICO GOLD

CHRONO



Dear Customer

WE CONGRATULATE YOU ON THE PURCHASE OF THIS U-BOAT MODEL.

 
IN THIS MANUAL YOU WILL FIND THE INSTRUCTIONS FOR YOUR WATCH.

WE THANK YOU FOR YOUR TRUST AND INVITE YOU TO REGISTER ON OUR OFFICIAL WEBSITE IN THE [U-CLUB](#) SECTION DEDICATED EXCLUSIVELY TO OWNERS/POSSITORS OF U-BOAT PRODUCTS, IN ORDER TO RECEIVE ADDITIONAL ADVANTAGES, AND BE INFORMED ABOUT OFFERS, EVENTS AND NEWS IN PREVIEW.



Mechanic Automatic-Chrono

WATCH FUNCTIONS

- A CUP CROWN
- B PULSANTE AVVIO/ARRESTO CRONOGRIFO
- C CROWN
- D PULSANTE RESET CHRONO
- E HOURS HAND
- F MINUTES HANDS
- G SECONDS COUNTER CHRONO
- H SECONDS HANDS
- I MINUTES COUNTER CHRONO
- L HOURS COUNTER CHRONO
- M DATE

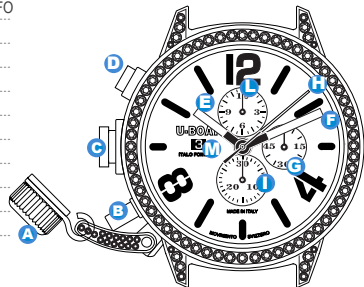

  Indicative image
Some components may be missing
or arranged in a different position.

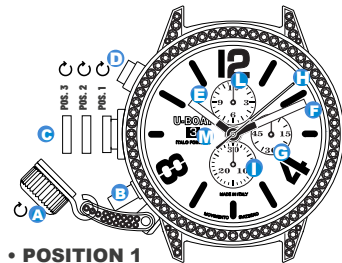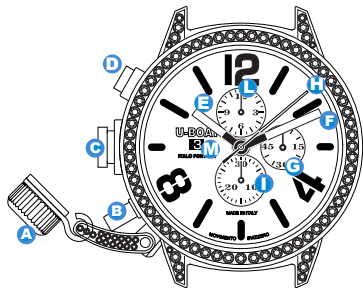

- **POSITION 1**
NEUTRAL POSITION
- **POSITION 2**
FIRST CLICK
- **POSITION 3**
SECOND CLICK

 
1. Unscrew the cup crown **A** to access the crown **C**

POSITION 1 to charge and start the watch, turn the crown **C** clockwise
NEUTRAL POSITION

POSITION 2 to bring it to crown **C** position 2.
FIRST CLICK turn the crown **C** clockwise to set the date **M**

POSITION 3 to bring it to crown **C** In position 3.
SECOND CLICK Turn the crown **C** Clockwise to set to desired time.

2. Push the crown **C** Back in to position 1. To screw the cup crown **A** until it is completely blocked .

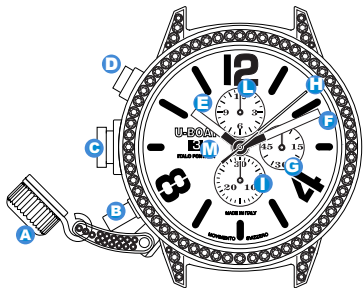

***ATTENTION**
NO CORRECT POSITION



CORRECT POSITION



***ATTENZIONE: IMPORTANT FOR THE REMITTANCE DATE**

To prevent misalignment or breakage of the date wheel when resetting the date, make sure the

1. When manually resetting the date, the hand **E** are not positioned between 21 and 03 o'clock.
2. The day displayed by the date **N** is aligned with the window (see figure below).
3. Pull the crown **C** out to position 3, position the hand **E** at 15 o'clock, pull the crown **C** out to position 2, and move the date **N** to the desired day, paying attention to step 2.



Press the pusher **B** (start / stop) to start the hand of the chronograph and the hour/minute totalizer.

Press again the pusher **B** to stop the chronograph, which will restart when the same button is pressed again.

After recording the times, with the chronograph stopped, press the pusher **D** to reset the chronograph and totalizer hands to zero.



CARE AND MAINTENANCE

- Your watch will maintain its performance intact for a long time, with the appropriate care.
- We recommend that you have your watch checked every 3-4 years by one of our Authorized Retailers/Authorized Service Centers, to carry out normal maintenance of all mechanical parts and water resistance.
- We also recommend that you contact an Authorized Retailer/Authorized Service Center to replace the strap.
- Avoid leaving your watch in places exposed to strong temperature variations, humidity, sunlight and intense magnetic fields.
- Make sure that your watch is suitable for use in water.
- Always rinse your watch with fresh water after contact with salt water.
- Automatic watches require manual winding after a long period of inactivity.

AUTOMATIC WATCHES REQUIRE MANUAL WINDING AFTER A LONG PERIOD OF INACTIVITY



U-BOAT HEAD OFFICE

Via Pesciatina 751H

Gragnano, Capannori - 55010 Lucca - Italy

Tel: +39 0583 469288 - Fax: +39 0583 462249

www.uboatwatch.com - service@u-boatwatch.com